




INFORMATION ON GLASS TEMPLATES FOR 3D CONFIGURATOR

IMPORTANT : the visual you export will be printed identically without any retouching on our part. We cannot be held responsible for any layers that are not deactivated or for any elements that you did not want on your glass (e.g. graduation, logo, etc.).

CREATION :

➔ **Illustrator :**

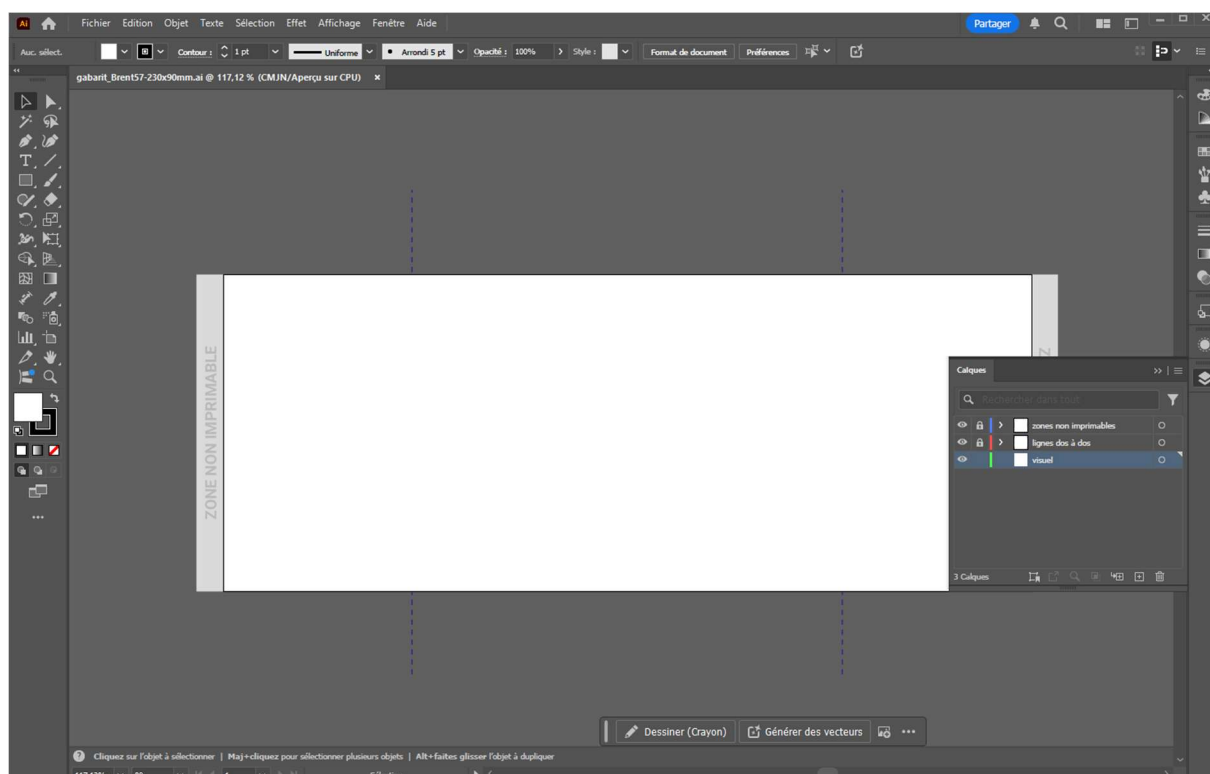

The template contains several groups of layers:

- **Visuel :**
You should only work on this layer group.
- **Lignes dos à dos :**
You can move this layer to see if the elements you are placing will be back to back. **It is advisable to deactivate this layer before importing it into the configurator.**

- **Zones non imprimables :**

Some areas of the glass cannot be customised for technical reasons. This layer enables you to understand the entire surface of the glass (e.g. back to back). **It is advisable to deactivate this layer before importing it into the configurator.**

➔ **Other graphics software :**

If your software does not support the opening of AI files, a template in PDF format is also available. Remember that all the elements of your final export will be printed.

EXPORT :

➔ **Things to check before exporting**

- The file must only contain vector elements. Any non-vectorised bitmap elements will be ignored.
- Your visual should be in strictly one colour only. Any file containing several colours (e.g. black + white) will be rejected.
- All your fonts must be vectorised
- It is advisable to break down all layouts (backgrounds, borders) into their component parts

Please also note that in the case of a file containing several work plans, only the first will be imported.